

EDGE®2 UPDATE FEATURES

	FEATURES	EDGE 2	EDGE
1	Screen	 Capacitive screen functions like a smart phone. Swipe or slide from one screen to the other. Reacts more quickly to touch. 	 Resistive screen that needs to be pressed to operate.
2	Icons/Navigation	 Updated Icons Main menu lists an overview of all rooms. Select a room to gain access to the setting and operation page of that room. Configuration Menu: Left to right. 	 Static icons in upper left corner of display. Configuration Menu: Top to bottom
3	In Room/Tile Adjustment	 Expandable tiles to see more details. Fan and inlet status in one ventilation tile screen. 	NOT AVAILABLE
4	In Room/Ventilation Tile/Stages	 CFM for each stage displayed in the grid and under the ventilation tile. 	NOT AVAILABLE
5	In Room/Tile Repositioning	Customizable room views	NOT AVAILABLE
6	Room/Shortcut Key	 Faster navigation from tile to tile (fewer clicks) 	NOT AVAILABLE
7	Light Program	Graphical view of the light schedule.3-day light schedule history.Light program option shortcut key.	NOT AVAILABLE
8	Alarms, Events & Issues	 Customizable navigation sorting. (Alarms/Events/Issues) Alarm acknowledge button. 	All in same page.
9	Ventilation Grid	• Reordering of fan and inlet tiles. (One dot if fan is full ON.)	• Fans/Inlets are displayed in the order they were created. (Two dots if fan is full ON)
10	Ventilation Grid	• Fan stage started any day of the week	NOT AVAILABLE
11	Scheduling/Wizard	 Schedule started any day of the week. Wizard setup for faster repeatable scheduling. (Example: A purge schedule in which every 30 minutes air is purged for 2 minutes.) 	NOT AVAILABLE
12	Programmable Timer	 Can be programmed down to the second. (Chain Feeder System) 	 Can be programmed to the minute only.



EDGE®2 UPDATE FEATURES CONTINUED...

	FEATURES	EDGE 2	EDGE
13	Outside Room Tile	• Weather station and Bulk Feed Tank information found under the tile.	NOT AVAILABLE
14	Custom Units	 Temperature: C/F Weight: Gram/Pounds Water: L/G 	NOT AVAILABLE
15	Programs	 Up to 8 programs can be set. Programs can be switched manually or by animal stage in version 4.2 	NOT AVAILABLE
16	Natural Ventilation/ Wind Compensation	• Wind compensation on individual panels with 4 steps of compensation.	• Limited wind compensation in one direction for all panels.
17	Natural Ventilation/Purge with wind compensation	• Purge with wind compensation is available in 4 steps depending on wind speed	NOT AVAILABLE
18	Heaters/Brooder/Natural Curtain Interlocking	 Heaters can be forced off during purge cycles. Natural curtains can be forced to close or set for minimum for minimum opening during heating cycles. 	NOT AVAILABLE
19	Maximum Ventilation	 Version 4.2 - Set a maximum power stage and a maximum tunnel stage to block the ventilation under minimum bird age. (one for power, one for tunnel) 	NOT AVAILABLE



EDGE®2 supports all major languages and is UL/CSA certified and CE approved.

Contact your Cumberland representative or visit cumberlandpoultry.com for more information.



